


korf

TA-CF9/10 Series II

Owner's manual

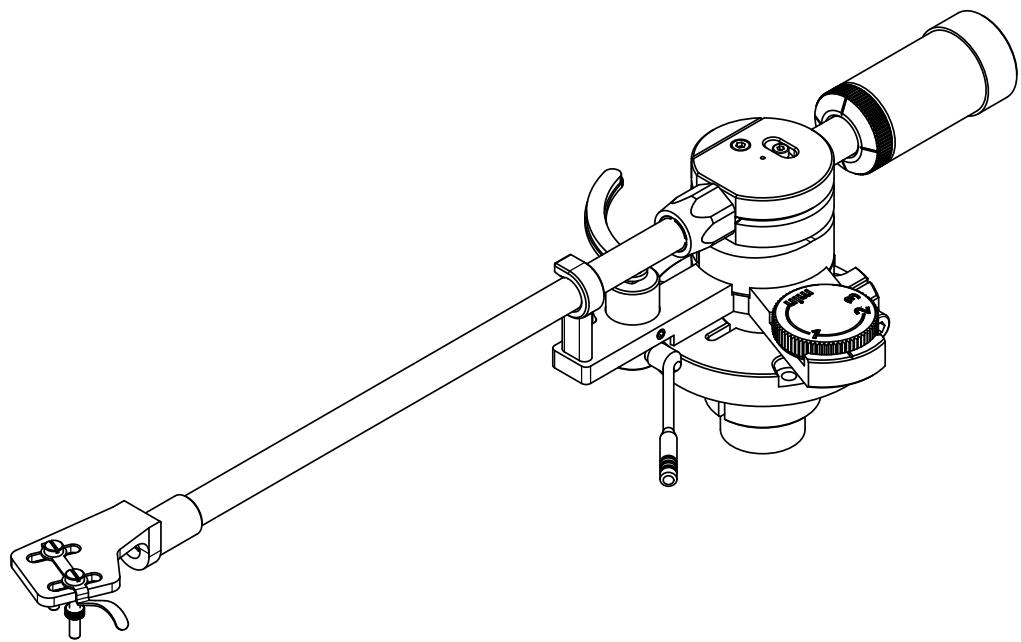

Welcome

Thank you for choosing Korf Audio. Your new precision tonearm is the industry first to employ monocrystalline sapphire tube for unmatched reference-level playback of any record. Sapphire armtube in combination with alumina ceramic headshell convey extraordinary rigidity, which is the single best predictor of outstanding audio performance in tonearms.

Of course, this is not the only advanced thing about your tonearm. There are many more, such as the horizontal flexure pivot. Completely frictionless, yet locating the tonearm with perfect precision, without slack or chatter. Low resonances, achieved without elastic damping. The Korf tonearm is very easy to use, and needs no maintenance. It works optimally with virtually any modern cartridge, light or heavy, high compliance or low.

Your Korf tonearm is hand built in Austria. It should provide you with many years of superlative sound reproduction. To get the most out of your new tonearm and avoid disappointment, please read the entire manual and follow its recommendations.


This manual is written with an experienced analogue audio enthusiast in mind. If this is your first tonearm installation, kindly ask someone versed in installing and adjusting tonearms for help. Please understand that Korf Audio cannot be held liable for damage to the tonearm and your equipment that resulted from mishandling.

Enjoy your Korf tonearm, and thank you once again from everyone at Korf Audio.



Alex Korf

What's in the box?

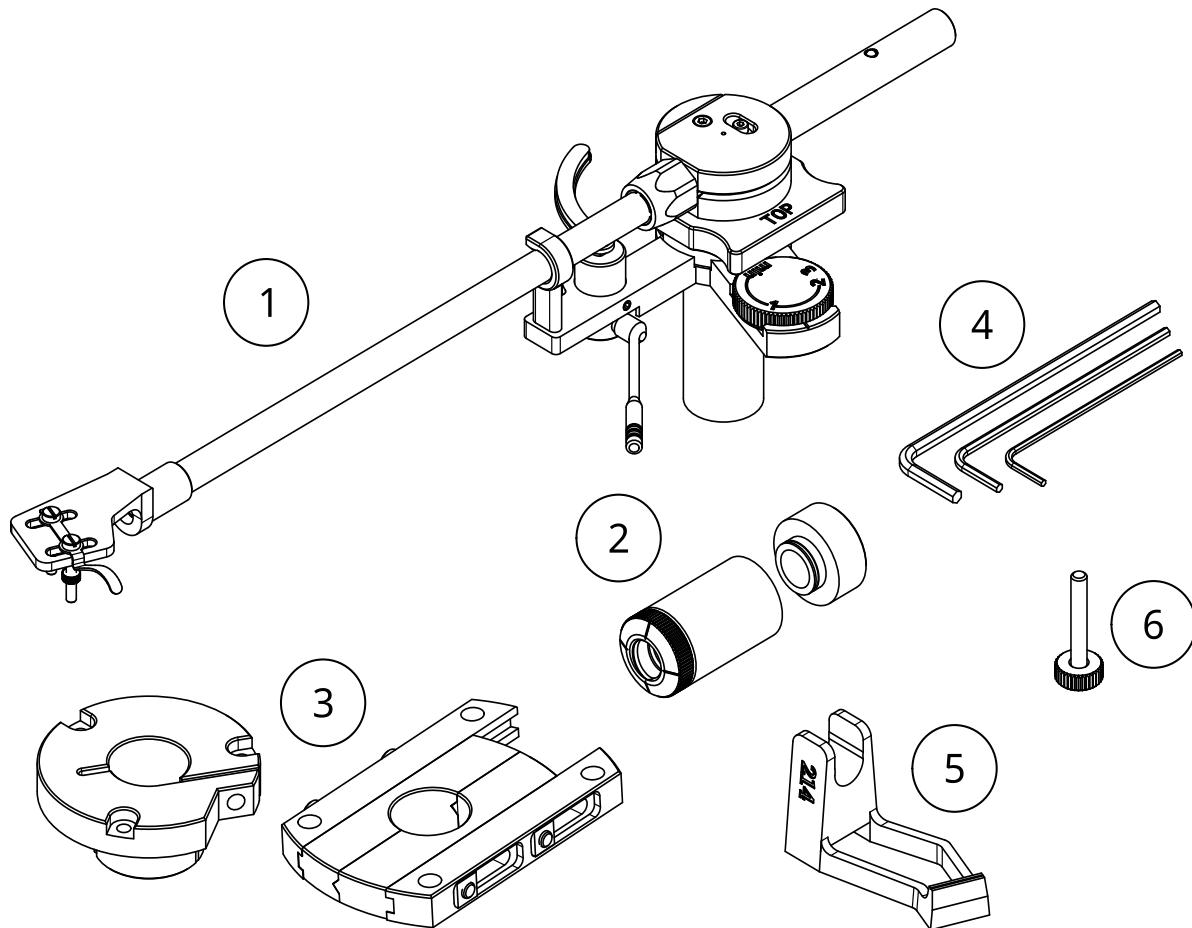

The tonearm box contains

1. The tonearm itself, with the red transport spacer fixing its upper part in place
2. Two counterweight: the large main one and the small additional one
3. One or more arm bases as ordered
4. Hex keys: 3, 2, 1.5 mm (may look different to illustration)
5. Stylus Gauge
6. VTA Thumbwheel


Inspect the box for signs of damage which might have occurred during transit. If heavily damaged, do not accept! If you have mistakenly accepted a damaged shipment, please notify us at info@korfaudio.com. We will explain the necessary steps of returning the damaged box.



Save the packaging! You'll need it if you would want to return the Korf tonearm, sell it, store it or move it.



Getting to know your Korf tonearm

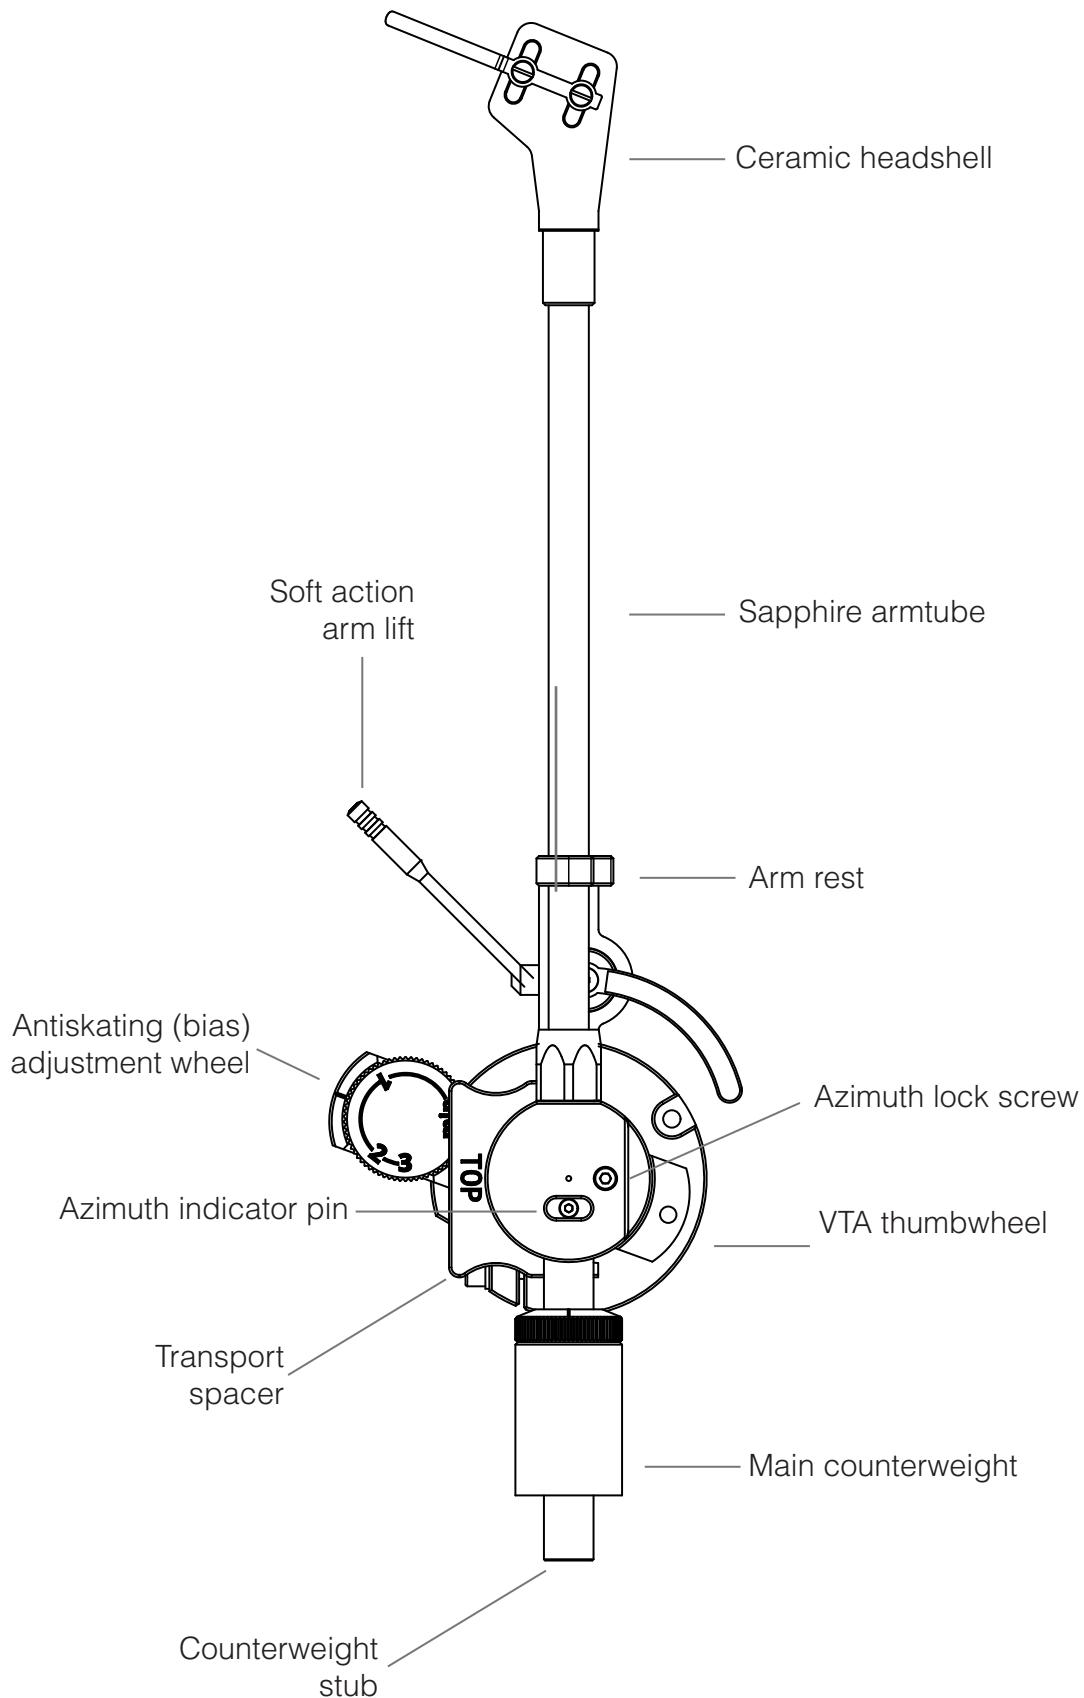


Handling and Storage

Any quality tonearm is a delicate piece of equipment. Korf tonearms are not an exception. Mishandling the tonearm ruins its precision bearings. A conventional tonearm with broken bearings will still work after a fashion. The Korf tonearm with a broken flexure bearing instantly becomes unusable.

To prevent damage to the fragile horizontal flexure bearing:

- ! Remove and handle the tonearm by its lower part
- ! Never push on the tonearm from the top
- ! Never pull the tonearm by its top part, its arm tube or the counterweight stub.

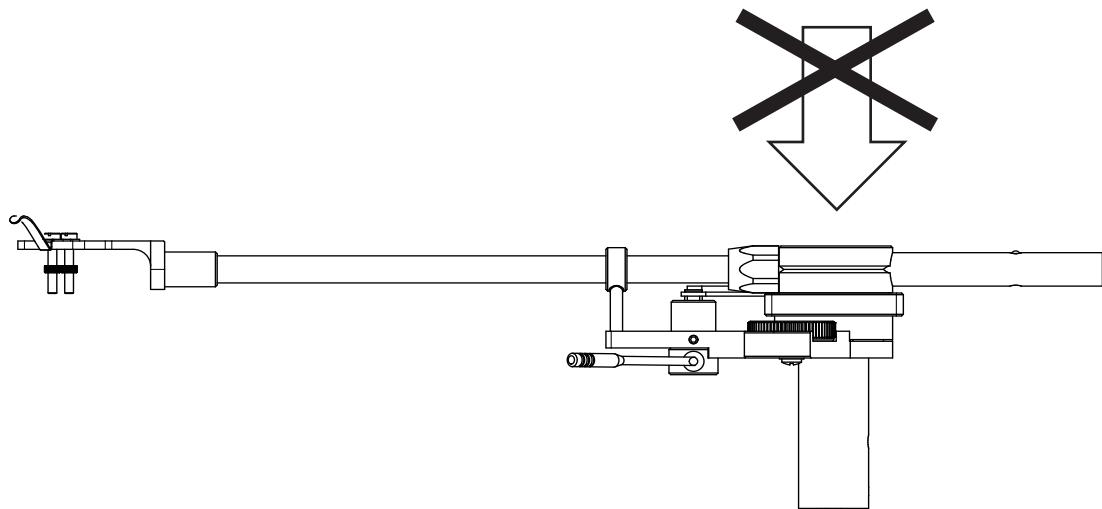

The plastic transport spacer protects the flexure bearing. Remove it once the tonearm is mounted on the turntable. There is no need to use the spacer in day to day operation of the tonearm. Please understand that the spacer cannot completely prevent damage from mishandling.

Avoid exposing the tonearm to

- ◊ Dust
- ◊ Particles (shavings, chips etc), especially magnetic
- ◊ Humidity

Do not disassemble. There are no user adjustable parts inside. In normal operation, the tonearm does not need servicing through its entire life.



Mounting

The center of the arm base can be positioned anywhere on the 214 mm (TA-CF9)/230 mm (TA-CF10) arc centered on the turntable spindle. Please mind the freedom of counterweight movement at all playing angles. Within these constraints, select any easy to reach position that is visually appealing to you. The next page has the cutout drawings for the two bases that can be supplied with the Korf tonearm. Make a 1:1 copy of it to have a cutout and holes template.

The tonearm has a dimple on top that marks its vertical pivot axis when the armtube is locked in the arm rest.




Make sure your turntable is exactly horizontal. Otherwise the Korf tonearm may operate incorrectly.

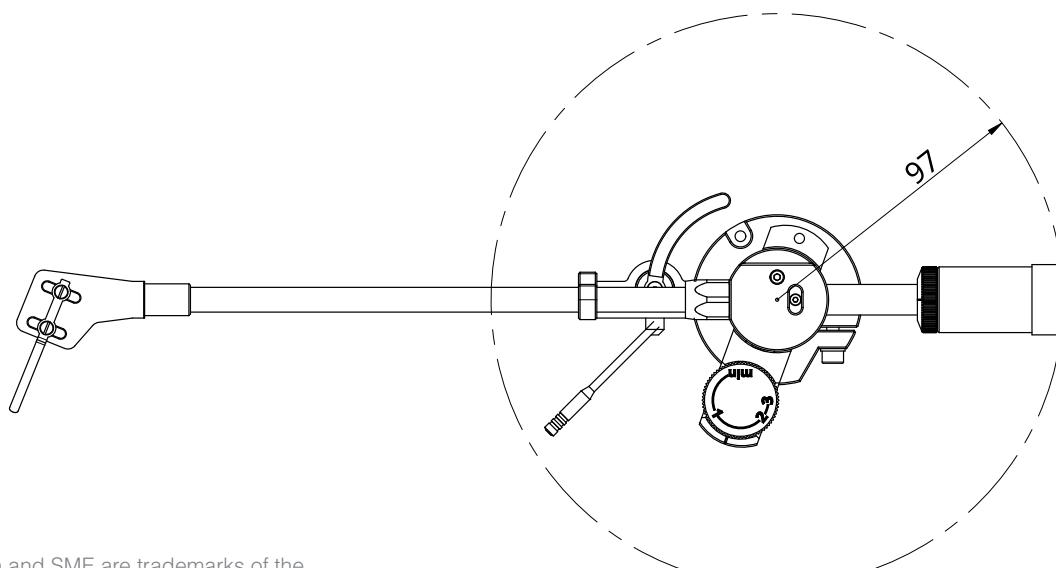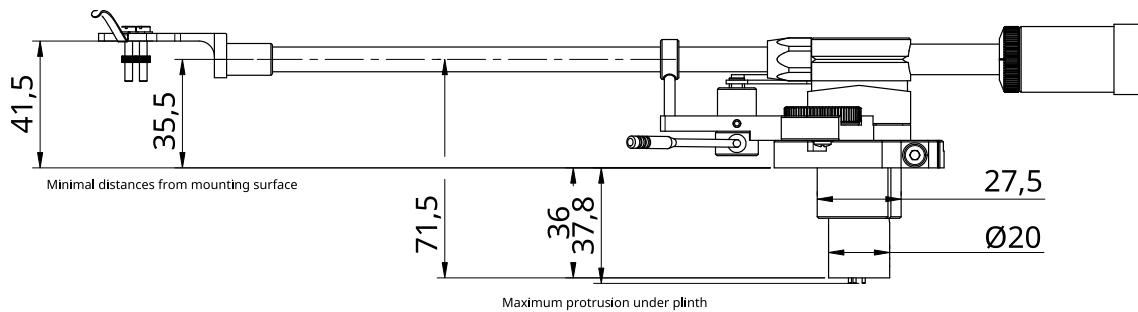


Mounting Templates

JIS/Jelco/Linn mount

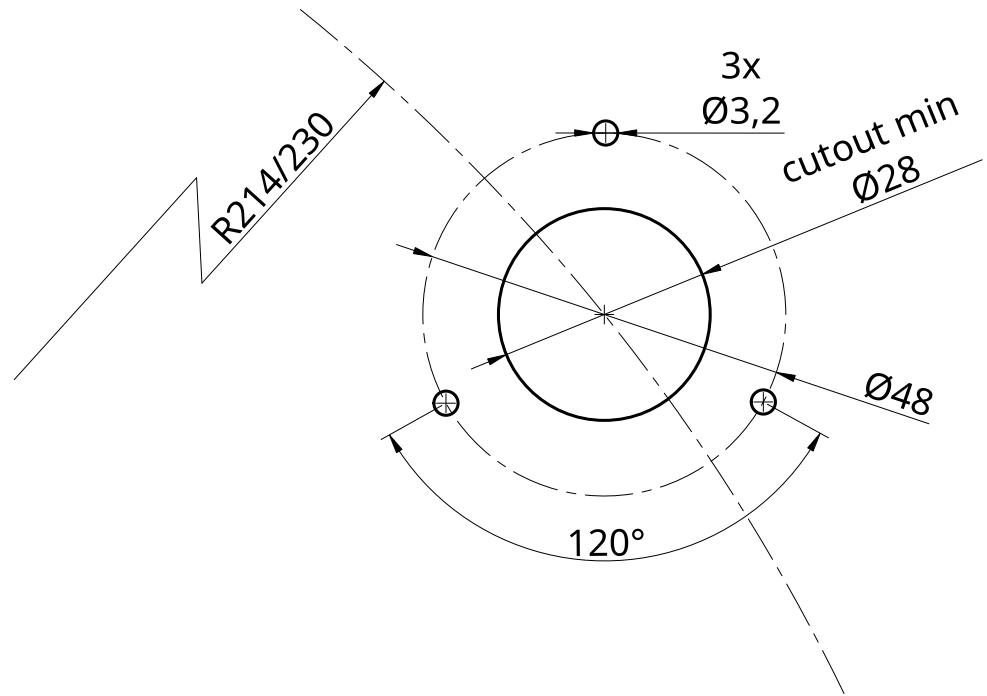

SME compatible mount

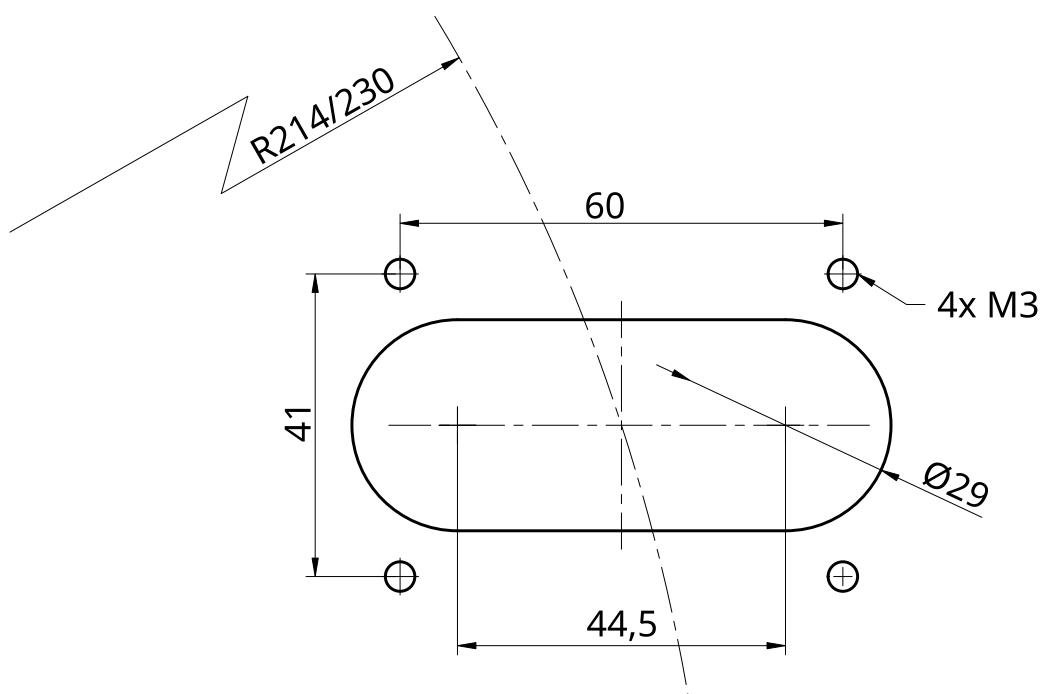


Setting up your Korf tonearm

Cartridge Alignment

Please use the included clip-on gauge to set the cartridge position in the headshell. Clip the gauge to the polished metal headshell connector from below, and slide towards the headshell until firmly adjoined.

Third party protractors may give an incorrect alignment; when in doubt please refer to the gauge.

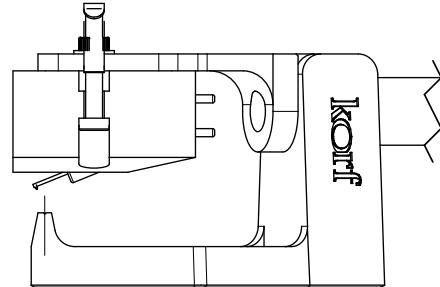

Downforce

The vertical tracking force (downforce) is adjusted by rotating the counterweight. $\frac{1}{4}$ of a turn corresponds to 0.5 gram change in downforce (when the additional counterweight is not installed). If your cartridge weighs more than 15 grams, please use an optional additional counterweight.

Unlike conventional tonearms, the Korf tonearm can not be balanced in the “zero downforce” position. This is by design. The zero friction horizontal bearing is disturbed by even the slightest movement of the air. Thus, the vertical tracking force must be set with a quality specialized downforce scale (not included with the tonearm).

Antiskating

To set antiskating (bias), start with rotating the antiskating wheel to show approximately the same number as the set downforce. “Min” on the wheel stands for “minimum” and marks a zero position.

Refer to our website for more in-depth instructions.

Tonearm Height

Loosen the clamp bolt(s) on the mounting base and then rotate the VTA thumbwheel to raise or lower the tonearm. You can also use the included 3 mm hex key to rotate the VTA screw from above. Then tighten the clamp bolt(s) back.

Azimuth

To adjust the azimuth:

- ◊ Place the transport spacer back into the tonearm, fixing the arm's upper part in place
- ◊ Undo the azimuth lock screw using the included 2 mm hex key, taking care not to press on the upper part of the tonearm
- ◊ Gently rotate the armtube, using the pin for visual reference
- ◊ When rotating the armtube, grip the upper part of the tonearm tightly and work against it. Do not apply any force to the flexure bearing
- ◊ Once the desired setting is achieved, tighten the azimuth lock screw.



Flexure bearing damage from attempted azimuth adjustment is not covered by the warranty.

Specifications

9" or 10" pivoting gimbal tonearm with sapphire armtube

	9"	10"
Effective length	229 mm	245 mm
Pivot to spindle distance	214 mm	230 mm
Offset angle	22°	22°
Effective mass	21 g	21 g
Horizontal axis bearing	Flexure pivot	Flexure pivot
Vertical axis bearings	Silicon Nitride rolling bearings	Silicon Nitride rolling bearings
Armtube material	Sapphire	Sapphire
Headshell material	Alumina ceramic	Alumina ceramic
Balance type	Static	Static
Minimum cartridge mass	5 g	5 g
Maximum cartridge mass	25 g	25 g
Cable connector	5 pin MDIN, male	5 pin MDIN, male
Internal wiring	6N OFC Litz	6N OFC Litz
Available tonearm mounting bases	JIS/Jelco/Linn SME compatible	JIS/Jelco/Linn SME compatible
Mass without cartridge and mounting collar, max	350 g	350 g

Limited Warranty

We promise to replace or repair your Korf tonearm free of charge if it fails due to manufacturing defects within 3 years from the date of delivery. If you are within the EU, we will pay to have it shipped to us and then back to you.

If you do not reside in the EU, you will need to cover the shipping costs. We will ship the repaired or replaced unit for free. You are responsible for customs fees or any taxes levied in your country on the repaired/replacement unit.

This warranty does not affect any rights that you might have as a consumer in your country.

For warranty repairs please write to info@korfaudio.com, describing the nature of the problem. Please mention the country you are in in your email.

The warranty does not cover:

- ◊ Mechanical damage resulting from mistreatment
- ◊ Water and moisture damage
- ◊ Damage that resulted from attempted disassembly of the tonearm, or from any modifications to the tonearm
- ◊ Any consequential damage resulting from the use or misuse of the Korf tonearm

Korf Audio GmbH
Urberweg 34
3400 Klosterneuburg Austria

For support, returns, warranty and general information
please write to:

info@korfaudio.com

Device serial number

